

EPSON

OEM NO.	COLOR	TYPE	PRINTER MODEL
T049170	B	DYE	Epson Stylus Photo_ R210/ R230/ R250/ R310/ R350/ RX430/ RX510/ RX530/ RX630/ RX650
T049270	C		Epson Stylus_ C20UX/ C40SX/ C41PLUS/ C41SX/ C41UX/ C43UX/ C45/ C59/ C60/ C61/ C66/ CX1500/ CX2900/ CX2905/ CX3100
T049370	M		Epson Stylus Photo_ 700/ 710/ 720/ 720T/ 750/ 780/ 785/ 790/ 795/ 810/ 830/ 870/ 870SE/ 875DC/ 890/ 895C/ 915/ 925/ 935/ 1270/ 1290 EX/ EX2/ EX3/
T049470	Y		Epson Stylus Color_ 400H/ 440H/ 460/ 480/ 500H/ 580 600H/ 640H/ 660/ 670/ 680/ 685/ 740/ 760/ 880/ 800H/ 850H/ 860/ 900H/ 980/ 980H/ 1520H
T049570	LC		Millenium Printer_ PM770C
T049670	LM		
T032170	BP	PIG	Epson Stylus_ CX3500/ CX3700/ CX4100/ CX4500/ CX4700/ CX5100/ CX5300/ CX5400/ CX6300/ CX6500
T046170			Epson Stylus_ C63/ C65/ C67/ C80/ C82/ C83
T063170			
T032270	CP	PIG	Epson Stylus_ CX3500/ CX3700/ CX4100/ CX4500/ CX4700/ CX5100/ CX5300/ CX5400/ CX6300/ CX6500
T032370	MP		Epson Stylus_ C63/ C65/ C67/ C80/ C82/ C83
T032470	YP		
T047270	CP	LB/LC/LM	
T047370	MP		
T047470	YP		
T042270	CP		
T042370	MP		
T042470	YP		
T063270	CP		
T063370	MP		
T073170(73N)	B	DYE	Epson Stylus_ C90/ C110 Epson Stylus_ CX3900/ CX3905/ CX4900/ CX4905/ CX5500/ CX5505/ CX5510/ CX5900/ CX6900/ CX6900F/ CX7300/ CX7310/ CX8300/ CX9300F Epson Stylus_ T10/ T20/ T21/ TX110/ TX112/ TX113/ TX200/ TX203/ TX210/ TX213/ TX220/ TX228/ TX400/ TX410/ TX550W Epson Stylus Photo_ TX510FN Epson Stylus Office_ T30/ TX100/ TX102/ TX103/ TX300F/ TX600FW
T082170(82N)	B	DYE	Epson Stylus Photo_ R290/ R390/ RX590/ RX610/ RX690/ T50/ TX650/ TX700W/ TX800FW
T082270(82N)	C		
T082370(82N)	M		
T082470(82N)	Y		
T082570(82N)	LC		
T082670(82N)	LM		
T073170(73N)	BP	PIG	Epson Stylus_ C90/ C110 Epson Stylus_ CX3900/ CX3905/ CX4900/ CX4905/ CX5500/ CX5505/ CX5510/ CX5900/ CX6900/ CX6900F/ CX7300/ CX7310/ CX8300/ CX9300F Epson Stylus_ T10/ T20/ T21/ TX110/ TX112/ TX113/ TX200/ TX203/ TX210/ TX213/ TX220/ TX228/ TX400/ TX410/ TX550W Epson Stylus Photo_ TX510FN Epson Stylus Office_ T30/ TX100/ TX102/ TX103/ TX300F/ TX600FW
T073270(73N)	CP		
T073370(73N)	MP		
T073470(73N)	YP		
T063170	B		
T063270	C		
T063370	M		
T063470	Y		
T073270(73N)	C	DYE	Epson Stylus_ C90/ C110/ C67 / CX3900/ CX3905/ CX4900/ CX4905/ CX5500/ CX5505/ CX5510/ CX5900/ CX6900/ CX6900F/ CX7300/ CX7310/ CX8300/ CX9300F/ CX3700/ CX4100/ CX4700 / T10/ T20/ T21/ TX110/ TX112/ TX113/ TX200/ TX203/ TX210/ TX213/ TX220/ TX228/ TX400/ TX410/ TX550W
T073370(73N)	M		Epson Stylus Photo_ TX510FN
T073470(73N)	Y		Epson Stylus Office_ T30/ TX100/ TX102/ TX103/ TX300F/ TX600FW
T082170(82N)	BP	PIG	Epson Stylus_ R290
T082270(82N)	CP		
T082370(82N)	MP		
T082470(82N)	YP		
T082570(82N)	LCP		
T082670(82N)	LMP		

If you don't see your printer listed, please visit our webpage (www.moorimchem.com) for a more detailed listing.